

Introduction

The information in this document is intended as a general guide to help you set up the babyTEL service on your SIP compatible telephone system. It contains only babyTEL-specific parameters that need to be configured on your Dialogic Brooktrout SR140 software. For full and proper functioning of the babyTEL service and all other features, your equipment should be set up according to the detailed instructions provided by the manufacturer in their configuration guide. Make sure to use the latest Dialogic Brooktrout SR140 SDK.

Step 1 - Gather all the necessary information

Your User ID and Web password were provided to you in the Signup Confirmation email. Go to the babyTEL website (<u>www.babytel.net</u>) and login using your ID and password. (The login command can be found at the top right corner of the page.) Click on **babyTEL Service** to expand the menu and then click on **SIP Parameters**. A page similar to the example shown below will be displayed, with values relevant to your account.



Please have this information at hand when you configure your system.

Step 2 - Configure the SR140 SIP Parameters Using babyTEL Information

Note: Values for the Items shown in **blue** should be taken from the SIP Parameters page on your babyTEL account.

Note: When specifying the From Value, if the **Display Name** contains spaces or characters other than letters and numbers you must include it between quotes as in "Display Name".

Brooktrout Configuration Tool - Advanced Mode		
Brooktrout Configuration Tool - Advance File View Options Help Back Next Save Apply Brooktrout (Boston Host Service - Running) Driver Parameters (All boards) BTCall Parameters (All boards) Call Control Parameters Module 0x3: TruFax 400 BRI Module 0x41: SR140 P Call Control Modules SIP	Solutional Registrar Server #3: Additional Registrar Server #3: Additional Registrar Server #4: Primary Registrar Server #3: Additional Registrar Server #4: Primary Registrar Server #4: Primary Registrar Server #3: Additional Registrar Server #4: Primary Registrar Server #4: Primary Registrar Server #4: Primary Registrar Server #4: Primary Registrar Server #3: Additional Registrar Server #4: From Value: Contact Address:	BTP Parameters 259 1 259 1 204.101.5.67:5065 204.101.5.67:5065 DISPLAYNAME <sip:userid@sip.babytel.ca> 0 0 0</sip:userid@sip.babytel.ca>
	From Value: Contact Address: Username: Session Name: Session Description: Description URI: Email Address: Phone Number:	DISPLAYNAME <sip:userid@sip.babytel.ca> 0 0 0 UserID </sip:userid@sip.babytel.ca>

A Brooktrout Configuration Tool - Advanced Mode		
	S 2	
Home Back Next Save Apply	License Help	
Brooktrout (Boston Host Service - Running)	General Information IP Parameters T.38 Parameter	s RTP Parameters
BTCall Parameters (All boards) G- Call Control Parameters	Advance Do not change these pa been instru	e d Settings arameters unless you have ucted to do so
Module 0x3: Hurax 400 BH	Primary Registrar Server Address of Record:	UserID@sip.babytel.ca
i⊟- IP Call Control Modules	Primary Registrar Server Username:	UserID
	Primary Registrar Server Password:	SIP Password
	Primary Registrar Server Expiration:	600
	Additional Registrar Server #2 AOR:	
	Additional Registrar Server #2 Username:	
	Additional Registrar Server #2 Password:	
	Additional Registrar Server #2 Expiration:	3600
	Additional Registrar Server #3 AOR:	
	Additional Registrar Server #3 Username:	
	Additional Registrar Server #3 Password:	
	Additional Registrar Server #3 Expiration:	3600
	Additional Registrar Server #4 AOR:	
	Additional Registrar Server #4 Username:	
	Additional Registrar Server #4 Password:	
	Additional Registrar Server #4 Expiration:	3600
	Registration Interval:	60
	Maximum Forwards:	70 1 200
	Route URL:	
	Session Timeout:	0
	Session Refresh Interval:	-1
	Session Refresh Method:	0 0 1
	IP Interface For SIP:	
	IP Interface Port:	5060
	Redirect As Calling Party:	<u>□</u> 0 <u>⊢</u> 1
	Redirect As Called Party:	<u>□</u> 0 <u>⊢</u> 1
	User-Agent:	Brktsip/6.2.4B12 (Dialogic)
	RFC 3325 Identity:	0 0 - 2
		[Hide Advanced <<]

🎝 Brooktrout Configuration Tool - Advanced Mode		
File View Options Help		
Image: Control of the sector of the sect	S License Help	
Brooktrout (Boston Host Service - Running)	General Information IP Parameters T.38 Parameters	RTP Parameters
	Fax Transporting Protocol:	T.38 only
Module 0x3: TruFax 400 BRI	Generate CED tone over RTP:	Yes
Module 0x41: SR140	Maximum Bit Rate, bps:	14400
	Media Passthrough Timeout Inbound, msec:	1000
	Media Passthrough Timeout Outbound, msec:	4000
	Media Renegotiate Delay Inbound, msec:	1000
	Media Renegotiate Delay Outbound, msec:	-1
	T30 Fast Notify:	No
	UDPTL Redundancy Depth Control:	<u>5</u> 0 <u> </u>
	UDPTL Redundancy Depth Image:	2 01 2
	Advance Do not change these pa been instru	ed Settings arameters unless you have icited to do so
	Maximum T.38 Version:	0
	Type of Service (DSCP value):	0 0 J 63
		[Hide Advanced <<]
1		

Brooktrout Configuration Tool - Advanced Mode		
Hie View Options Heip	S License Help	
Brooktrout (Boston Host Service - Running) Driver Parameters (All boards) DTS-II Parameters (All boards)	General Information IP Parameters T.38 Parameters	RTP Parameters
- Gall Control Parameters - Call Control Parameters - Module 0x3: TruFax 400 BRI	RTP codec list: Silence Control:	inband
└── Module 0x41: SR140 ⊡- IP Call Control Modules └── SIP	Advanced Settings Do not change these parameters unless you have been instructed to do so	
	Frame Duration:	20
	Jitter Buffer Depth:	
	T.38 offer as CED tone:	Yes
	Type of Service (DSCP value):	<u>0</u> 0 ↓ <u>63</u>
	Voice Frame Replacement:	Silence
		[Hide Advanced <<]

SR140 callctrl.cfg Values Example:

CILV2.0 babyTEL Dialogic@ Proaktrout@ SP140	page 5 of 7
rtp_frame_duration=20	
[host_module.1/rtp]	
t38_UDPTL_redundancy_depth_image=2	
t38_UDPTL_redundancy_depth_control=5	
t38_type_of_service=0	
t38_t30_fastnotify=false	
t38_fax_transcoding_mmr=false	
t38_fax_transcoding_ibig=false	
t38 fax fill bit removal=false	
media renegotiate delay outbound=-1	
media renegotiate delav inbound=1000	
media_passthrough_timeout_outbound=1000	
media passthrough timeout inhound=1000	
$130_{11}ax_{01}ax=14400$	
10 t29 may bit rate 14400	
tas_lax_udp_ec=tasUDPRedundancy	
tax_transport_protocol=t38_only	
t38_fax_rate_management=transferredTCF	
[host_module.1/t38parameters]	
enabled=true	
module_library=brktsip.dll	
[host_module.1]	

rtp jitter buffer depth=100 rtp codec=pcmu pcma rtp_silence_control=inband t38 offer as ced=true rtp type of service=0 rtp_voice_frame_replacement=0 [host module.1/parameters] sip_max_sessions=261 sip_default_gateway=0.0.0.0:0 sip proxy server1=204.101.5.67:5065 sip_proxy_server2= sip_proxy_server3= sip proxy server4= sip_registration_server1=204.101.5.67;5065 sip_registration_server1_aor=UserID@sip.babytel.ca sip registration server1 username=UserID sip_registration_server1_password=SIP_PASSWORD sip_registration_server1_expires=600 sip registration server2= sip_registration_server2_aor= sip_registration_server2_username= sip registration server2 password= sip registration server2 expires=3600 sip registration server3= sip registration server3 aor= sip_registration_server3_username= sip registration server3 password= sip registration server3 expires=3600 sip registration server4= sip_registration_server4 aor= sip_registration_server4_username= sip_registration_server4_password= sip_registration_server4_expires=3600 sip registration interval=60 sip Max-Forwards=70 sip_From="Display Name" <sip:UserID@sip.babytel.ca> sip Contact=0.0.0.0:0 sip username=UserID sip_session_name=no_session_name sip session description= sip description URI= sip_email= sip_phone=UserID sip Route= sip_session_timer_session_expires=0 sip session timer minse=1 sip session timer refresh method=1 sip_ip_interface= sip ip interface port=5060 sip redirect as calling party=0 sip_redirect_as_called_party=0 sip user agent=Brktsip/6.2.4B12 (Dialogic) sip_RFC3325_Identity=0

Contact

If you require assistance you can contact us 24 hours a day, 7 days a week, by email at <u>service@babytel.net</u>.

You can also reach us by phone 7 days a week from 9 AM to midnight, Eastern Time at:

Canada	USA
Montréal: 514 201-6550 Toronto: 416 848-0990 Toll free: 1-877-258-VoIP (8647)	Toll free: 1-877-808-VoIP (8647)

Address: 1425 René-Lévesque, Suite 700, Montréal, Québec, Canada H3G 1T7

Website: www.babytel.net

Thank you for choosing babyTEL as your Internet Telephony Service Provider. We at babyTEL will continually strive to provide you a reliable service. As well, we will be regularly adding additional capabilities that you may find useful. Please keep up-to-date by visiting us at the babyTEL website. Pleasant surprises may await you.